



Disassembling Nerf Recon CS-6 Shell

Disassembly of the gun by splitting the outer shell in half to reach the inner parts.

Written By: Asad Qureshi



INTRODUCTION

This is a prerequisite to replacing any other piece. This guide involves removing most of the screws in the shell and splitting the gun along the middle seam.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove Magazine



i Skip this step if magazine is already removed.

- Pull slide back.
- Pull backwards on release buttons and slide magazine out.
- Push slide back forward and pull trigger.

Step 2 — Remove Visible Screws



- Use the Phillips #0 Screwdriver to remove these 9 screws.
- All screws marked in red are 9.6 mm Phillips #0 screws.
- Note that left most screw is longer than the rest and is a 18.6 mm Phillips #0 screw.

Step 3 — Remove Hidden Screws



- Pull slide back to reveal more screws.
 - Remove these 2 screws.
 - Push slide forward.
 - Pull trigger to release compression of the main spring.
 - Screws are 9.6 mm Phillips #0.
- i** Pulling the trigger will keep spring from launching out of the gun when the two halves are separated.

Step 4 — Remove Plunger Cap




- Remove the screws on the plunger cap.
- Tug the plunger cap off.
- Screws are 9.6 mm Phillips #0.

Step 5 — Remove Slide Screws



- Remove the 2 screws on the slide.
- Screws are 9.6 mm Phillips #0.
- ☒ Hold the two halves of the gun together to prevent any springs from launching out.

Step 6 — Split the Gun in Half

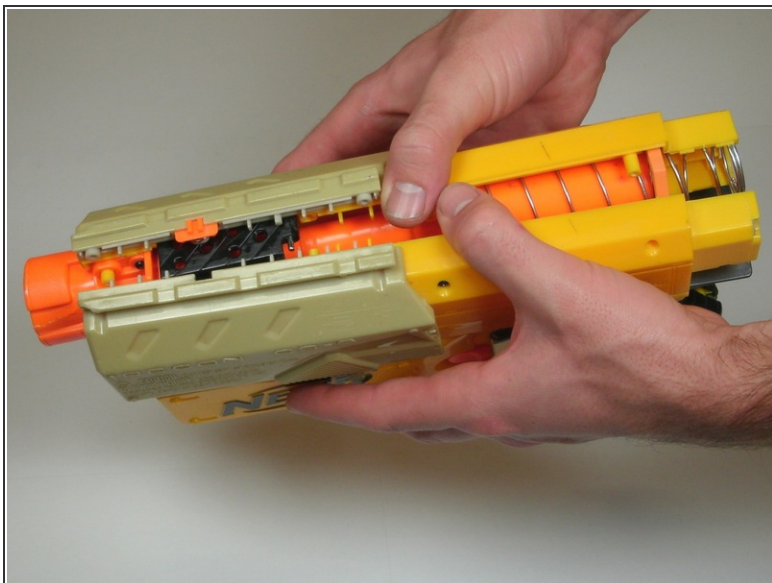

- Pull the gun apart at the middle seam.

 Watch for any springs that might launch out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 11:10:32 PM.